


## WARNING 8' ALUMINUM FOLDING RAMPS

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. **IF** any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

**⚠ WARNING:** This product can expose you to chemicals including lead from aluminum products which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!**  
**FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH**

	<h1 style="margin: 0;">Operation and Safety</h1>	<h2 style="margin: 0;">Loading Ramps</h2> <h3 style="margin: 0;">Aluminum Folding with Handles</h3> <p style="margin: 0;">8' Extended—4' Folded</p>
---	--	---

WARNING

SAFETY PRACTICES:



Inspect Ramps daily before use.

DANGER

Do Not over load Ramps, Weight to be distributed evenly.


Weight Capacity

- 1200 lbs. per ramp
- 2400 lbs. per pair

Beware when ramps are in use to stay clear of equipment rolling towards you.

Beware of wet and slippery surfaces, do not use under these conditions.

Be sure both ends of ramps are securely and completely level when in use.



Use Caution. Keep ramps away from electrical Hazards.

Be sure ramps are used on solid ground, do not use in sand or on soft soil.

Instructions for Using Ramps

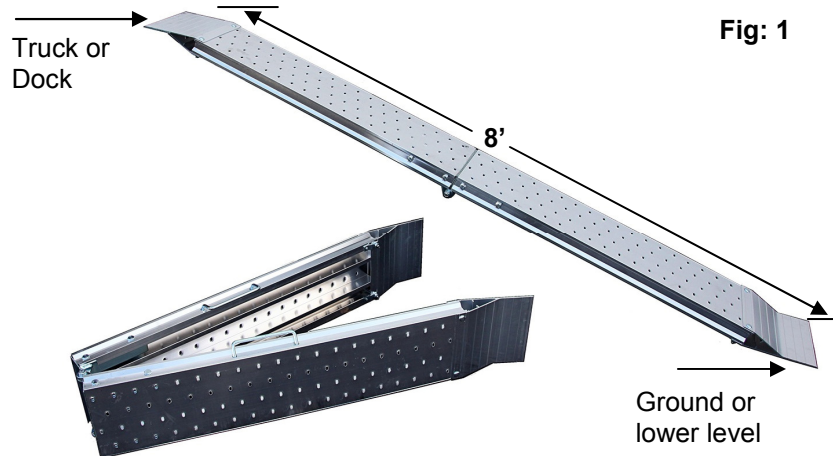


Fig: 1

Step	Action
1	Remove Ramps from carton or box.
2	Before use; first inspect ramps for any damage, bent parts or damage to hinge.
3	Unfold ramps and apply proper end to truck or dock and other end to ground or lower level. (As shown in fig. 1)
4	Be sure load is evenly distributed and does not exceed 1200 lbs per ramp (2400 lbs per pair).
5	Ramps ends need to be secure and level at contact to truck/dock & ground/lower level.